

## How to pair Alertex Heat and Smoke detectors with the Alertex system

1. Fit the CR123A lithium battery into the battery holder, observing correct polarity
2. The unit will flash the red LED 3 times to indicate start-up
3. Hold the pink button down until the red LED starts flashing quickly and then release it
4. Press the pink button quickly 7 times to start programming the unit
5. Wait until the red LED starts flashing quickly
6. Enter the SITE value first by pressing the pink button (press 1x for SITE 1, 2x for SITE 2, 3x for SITE 3, etc.)
7. Wait until the red LED starts flashing quickly
8. Secondly, enter the SUBNET value by pressing the pink button (press 1x for SUBNET 1, 2x for SUBNET 2, 3x for SUBNET 3, etc.)
9. Wait until the red LED starts flashing quickly
10. Lastly, enter the UNIT value by pressing the pink button (press 1x for UNIT 1, 2x for UNIT 2, 3x for UNIT 3, etc.)
11. The unit will then restart with the updated values and the red LED will flash 3 times

**Note:** Removing the battery whilst in the middle of programming will reset the unit to its' default settings